


Remove the original seats, including the original seat rails.

Secure the bracket (No. 760) at the original mounting points.


Make sure the seat belt attachment points on the inner brackets are to the rear and facing inwards towards the hand brake.

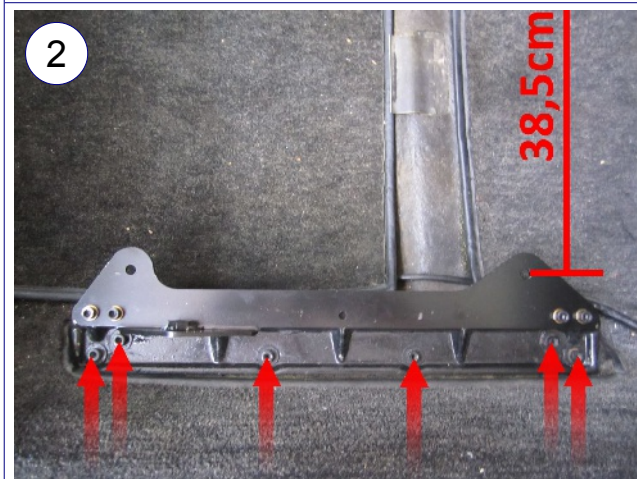


On the outer sills, attach the brackets to the original mounting holes with the seat belt attachment points at the rear also facing outwards. The distance between the hole centres on these brackets where the seat rails attach should be 385mm.



Attach the seats which have the rails already mounted to them. Using the handle, slide the seat all the way back exposing the front attachment holes of the rails. Using M8 x 25 bolts, flat washers and M8 Nyloc nuts, attach the rails to the brackets and tighten the nuts loosely.

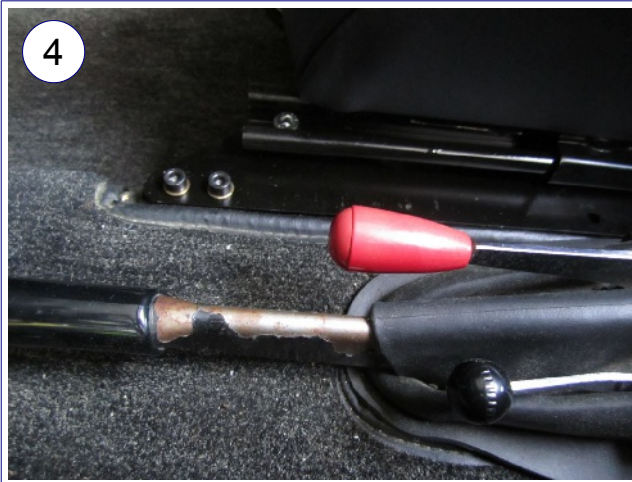

Slide the seat forward and attach rails at rear. Once all bolts are in place, tighten all nuts and check that seat slides forward and back easily and does not bind. If it jams, loosen all 4 nuts and slide back and forward, then retighten.

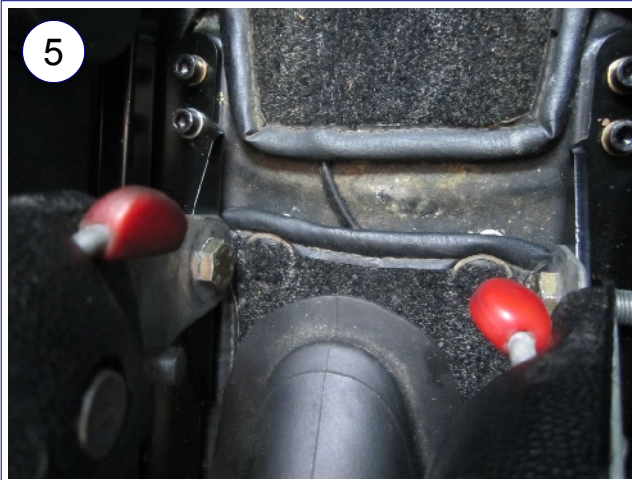

Detail rear fixing



Fully assembled.

BF Torino B85 Porsche 911 F Modell