


Step 1 :



These bolts and washers are required for mounting each seat.

- 4x M8x25mm Allen
- 4x M8 wave washer
- 4x M8 Washer thick

Step 2 :

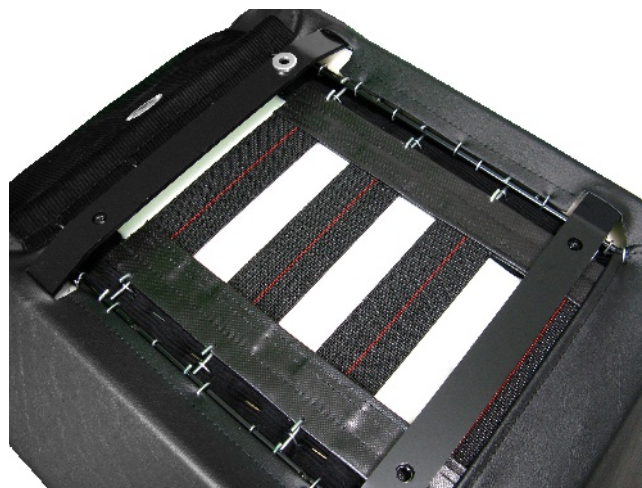

Insert the 5mm thick washer between the seat and seat rail. Start at the front of the seat.


Step 3 :

Screw the seat rail to the seat using the M8 x 25 bolt. Initially only hand tighten, so that the seat rails still move.



!!Caution, Insert the bolt and only hand tighten to avoid damage to the thread!!

Step 4 :

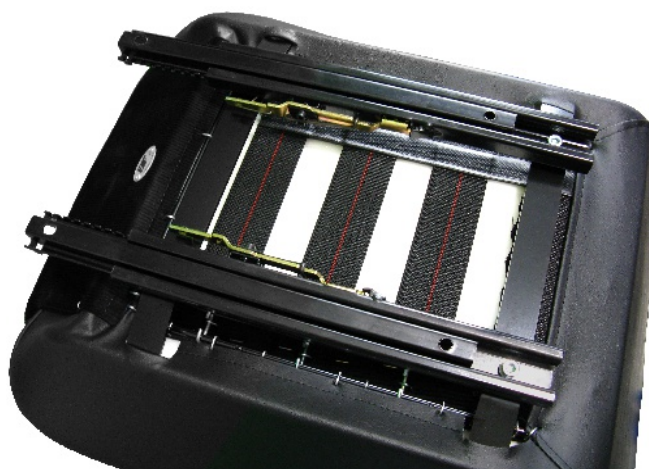

Attach the rail at the rear and hand tighten.
Attach the rear rail also.

Step 5 :



Now insert the adjustment handle on the actuating lugs of the seat rails. Depress the spring slightly as shown in picture. Push the handle onto the lugs as far as it will go.

Step 6 :



Check the front and rear distance between the bolt centres on rails to ensure they are parallel. There is a little play in the holes to allow for alignment. Set the distance at either 200mm or 385mm and tighten the bolts to lock into place.